


AD-IN Bin Hanging Instructions

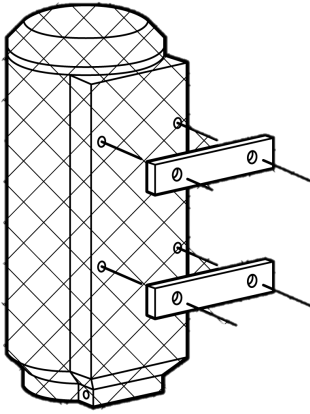

INCLUDED:

- (4) 1½ “ Threaded Bolts
- (2) 11¼ x 1 x ¼ Bars
- (4) Washers

NEEDED:

- Wrench (7/16)
- Lock or securing pin for bottom

WHERE TO HANG

- The bin is typically hung on the fence **outside of the court**. If you choose to hang it inside the court (facing players), make sure to check with local ordinances, and/or court personnel, regarding rules for hanging objects inside a court.
- Considerations:
 - Place near the court exit
 - Allow information on the AD-IN Bin to be read easily
 - Hang at height to allow all players easy access to the deposit hole
 - Allow enough clearance for the bottom to drop down and the balls to fall into a collection container
 - The closer to a fence support bar the better stability

HOW TO HANG

Outdoor Courts

This will take two people – one inside the court to work with the hardware and another outside the fence to hold up the unit. Since there are only four screws needed, and trellis/diamond fencing effortlessly aligns the bins to be level, it is an extremely easy mounting task.

- With one person outside the court (holding the bin) and one person on the court (with the hardware), line up the 4 pre-drilled holes to the diamond fencing so that they are accessible to screw hardware into.
- Top bar first, install hardware as illustrated above – placing washers between bolts and bar.
- Loosely tighten top bolts so that the bin settles securely and level into the fencing. The bottom holes should line up perfectly and bottom bar and bolts can be installed. Tightly secure bolts

Indoor Courts or Solid Walls

The AD-IN Bin can be adapted to hang on a solid structure, by using (2) 1 x 2 boards in addition to the metal bars provided. The bars sit against the bin, with the boards outside of them. Drill holes through the boards that are aligned with holes in the bars, and then countersink the bolts. Threading of the bolts is such that countersinking them will enable the assembly to sit flush against the flat surface.

The 1x2 boards will extend beyond the width of the bin, to allow for securing to the wall/surface. A minimum of 17 inches is required, but this length can be extended for convenience.

**WHEN READY TO SHIP BALLS TO
BE RECYCLED, VISIT
www.tennisballrecycling.com
FOR DIRECTIONS.**

Retour Tennis
info@retourtennis.com
608.445.5034